


Use in conjunction with rapid start ballasts and 4-pin lamps ONLY.

NOTE:

- ① Select proper voltage lead, cap unused lead.
- ② Lamp selector leads. refer to installation instructions for proper application.
- ③ Do not mate connector until installation is complete and AC power is supplied.
- ④ Test accessory lead – refer to installation instructions for proper polarity wiring.
- ⑤ No polarity on black leads – use either lead for connection to the AC circuit and ballast.

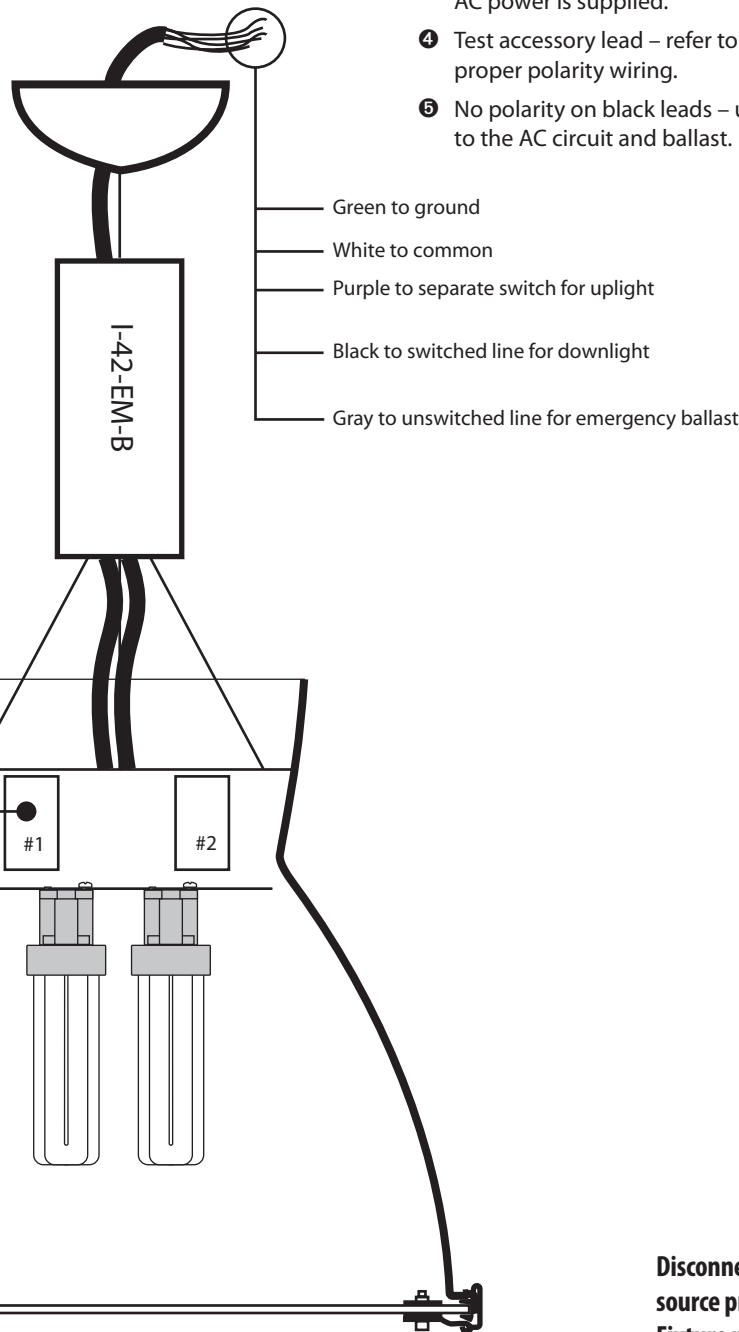

Disconnect main power at source prior to installation! Fixture must be installed by a qualified electrician.

