



Instructions for Rocket and Sonar Emergency Backup

4-Conductor Power Supply
Green = ground
White = neutral
Black = switched or un-switched line
Red = un-switched line

Note:
Plug in unit connector after
fixture installation.

When pushing test button,
Charge Indicator Light will go
out and fixture light should
remain on. (Allow 24 hours to
charge before testing.)

The Charge Indicator Light should be
constantly lit when connected to power,
indicating that the battery is charging.

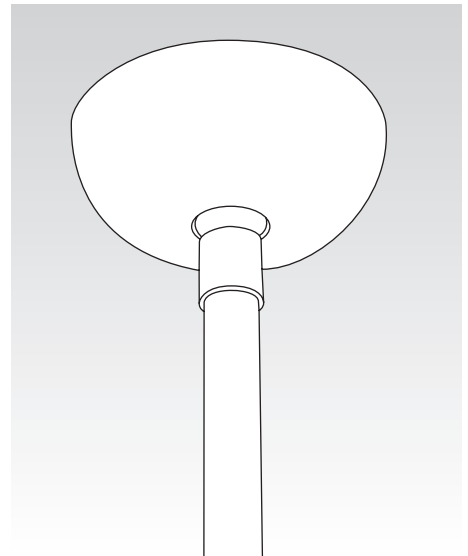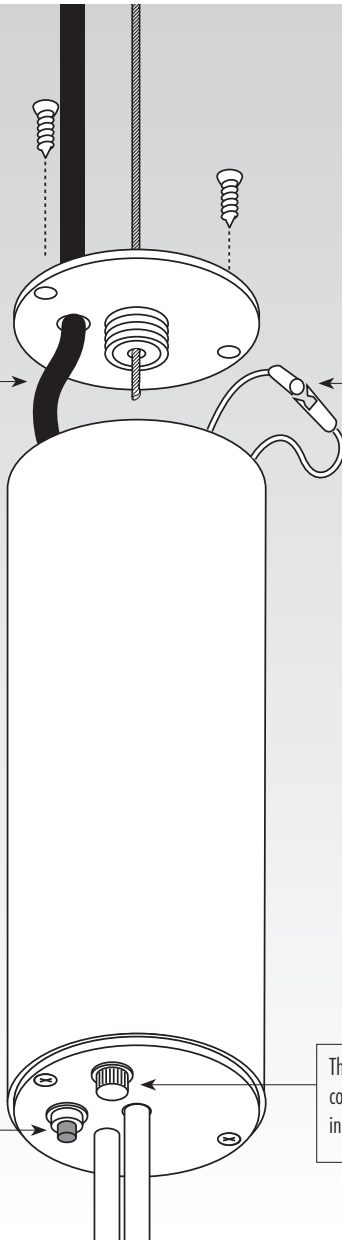


CMI – 7/8" OD hard stem option, supplied with swivel canopy for earthquake code, sloped ceilings, and indoor areas with light air movement (e.g., near HVAC vents). Pipe replaces power cord and cable.

Pipe longer than 8 ft. is shipped in two sections—one 8 ft., the other for the balance—with painted, threaded pipe coupler and set screws.



For ball aligner
assembly, see pages 2 & 3

EMI—Emergency Battery backup: remote battery pack in canopy ignites one compact fluorescent lamp for 90 minutes.

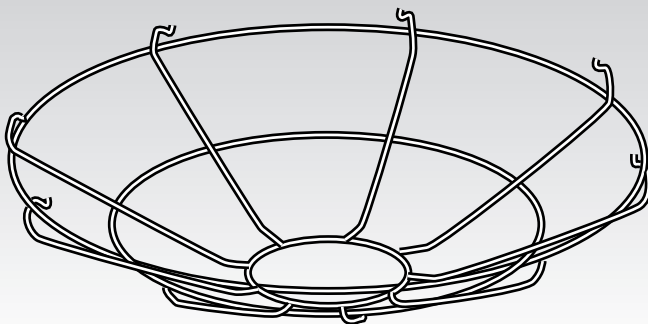

WGI—Galvanized steel wire guard, for open highbay or lowbay fixtures

WARNING:

Disconnect main power at
source prior to installation!
Fixture must be installed by
a qualified electrician.

