STICK ST9

 
SRB (Remote Ballast) Instructions 1

Installation ou de montage

WARNING:

Disconnect main power at the source prior to installation! Fixture must be installed by a qualified electrician.

Mount Fixture To Wall



NOTE: ballast box must be accessible after installation. Lamp to ballast distance must not exceed 16 ft.

