
UNO / DOS Configurations

Mount Instructions

Installation de montage | page 1 of 2

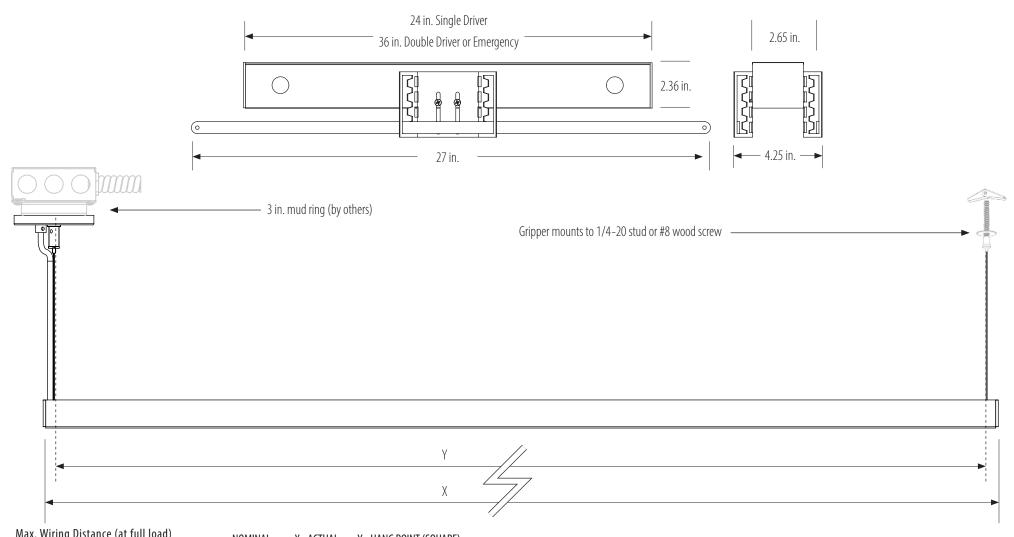

max. Willing Distance (at run road)	
Wire Size (AWG)	Distance (ft.)
18	18
16	29
14	46
12	71
10	120


NOMINAL	X=ACTUAL	Y=HANG POINT (SQUARE)
2 ft.	23.50"	22.40"
3 ft.	34.88"	33.78"
4 ft.	46.25"	45.15"
5 ft.	57.63"	56.53"
6 ft.	69.00"	67.90"
8 ft.	91.75"	90.65"



UNO / DOS Configurations

Mount Instructions

Installation de montage | page 1 of 2

 



Longer driver housing


Remote driver housing has options for bar hangers for mount above suspended ceilings.

Drivers must remain accessible after installation, and must be mounted no less than 4 inches apart.

LEDs will not operate unless polarity is correct.

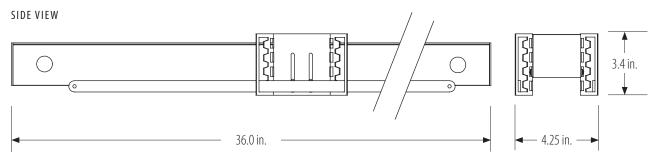

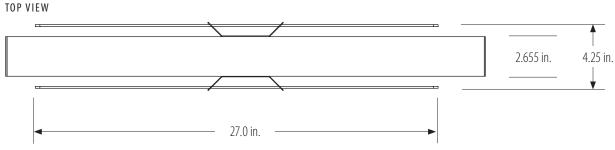

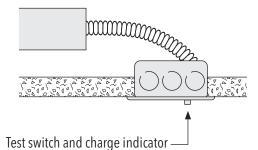

NOTE: EM packs require 2x4 handy box mounted to ceiling for test switch and charge indicator light.

Maximum canopy to fixture distance: 25 ft.

Maximum canopy to driver distance: 100 ft. (with 10 AWG wire).

