


# ROCKET LENSED LED

## Emergency Battery Backup (EM) Wiring Installation ou de montage

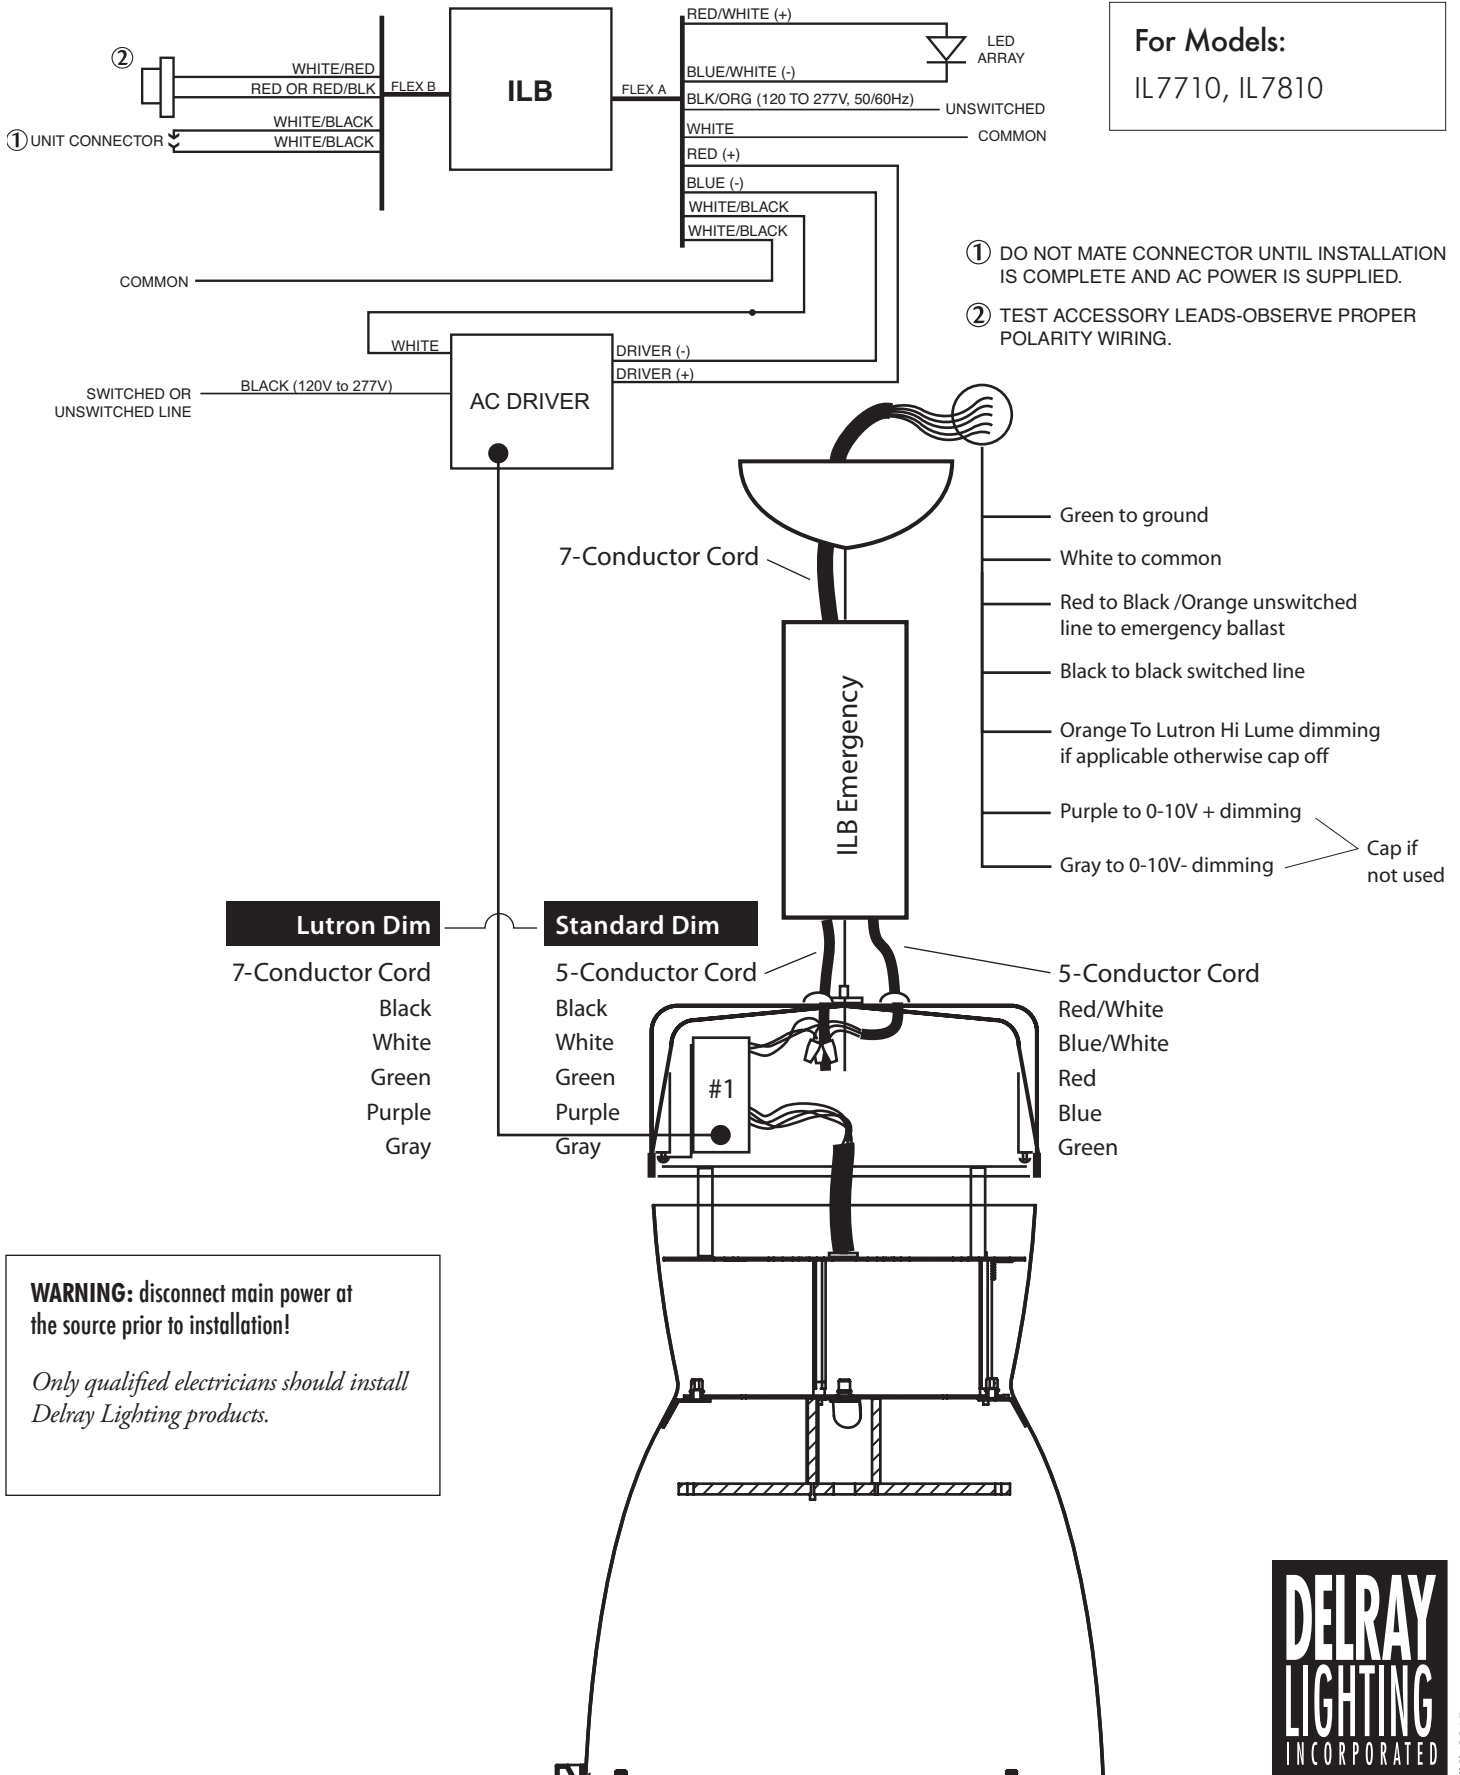

**For Models:**  
IL7710, IL7810

- ① DO NOT MATE CONNECTOR UNTIL INSTALLATION IS COMPLETE AND AC POWER IS SUPPLIED.
- ② TEST ACCESSORY LEADS-OBSERVE PROPER POLARITY WIRING.

**WARNING:** disconnect main power at the source prior to installation!

*Only qualified electricians should install Delray Lighting products.*

