


ROCKET OPEN LED

Emergency Battery Backup (EM) Wiring Installation ou de montage

For Models:

IL7712/13/14/16

IL7812/13/14/16

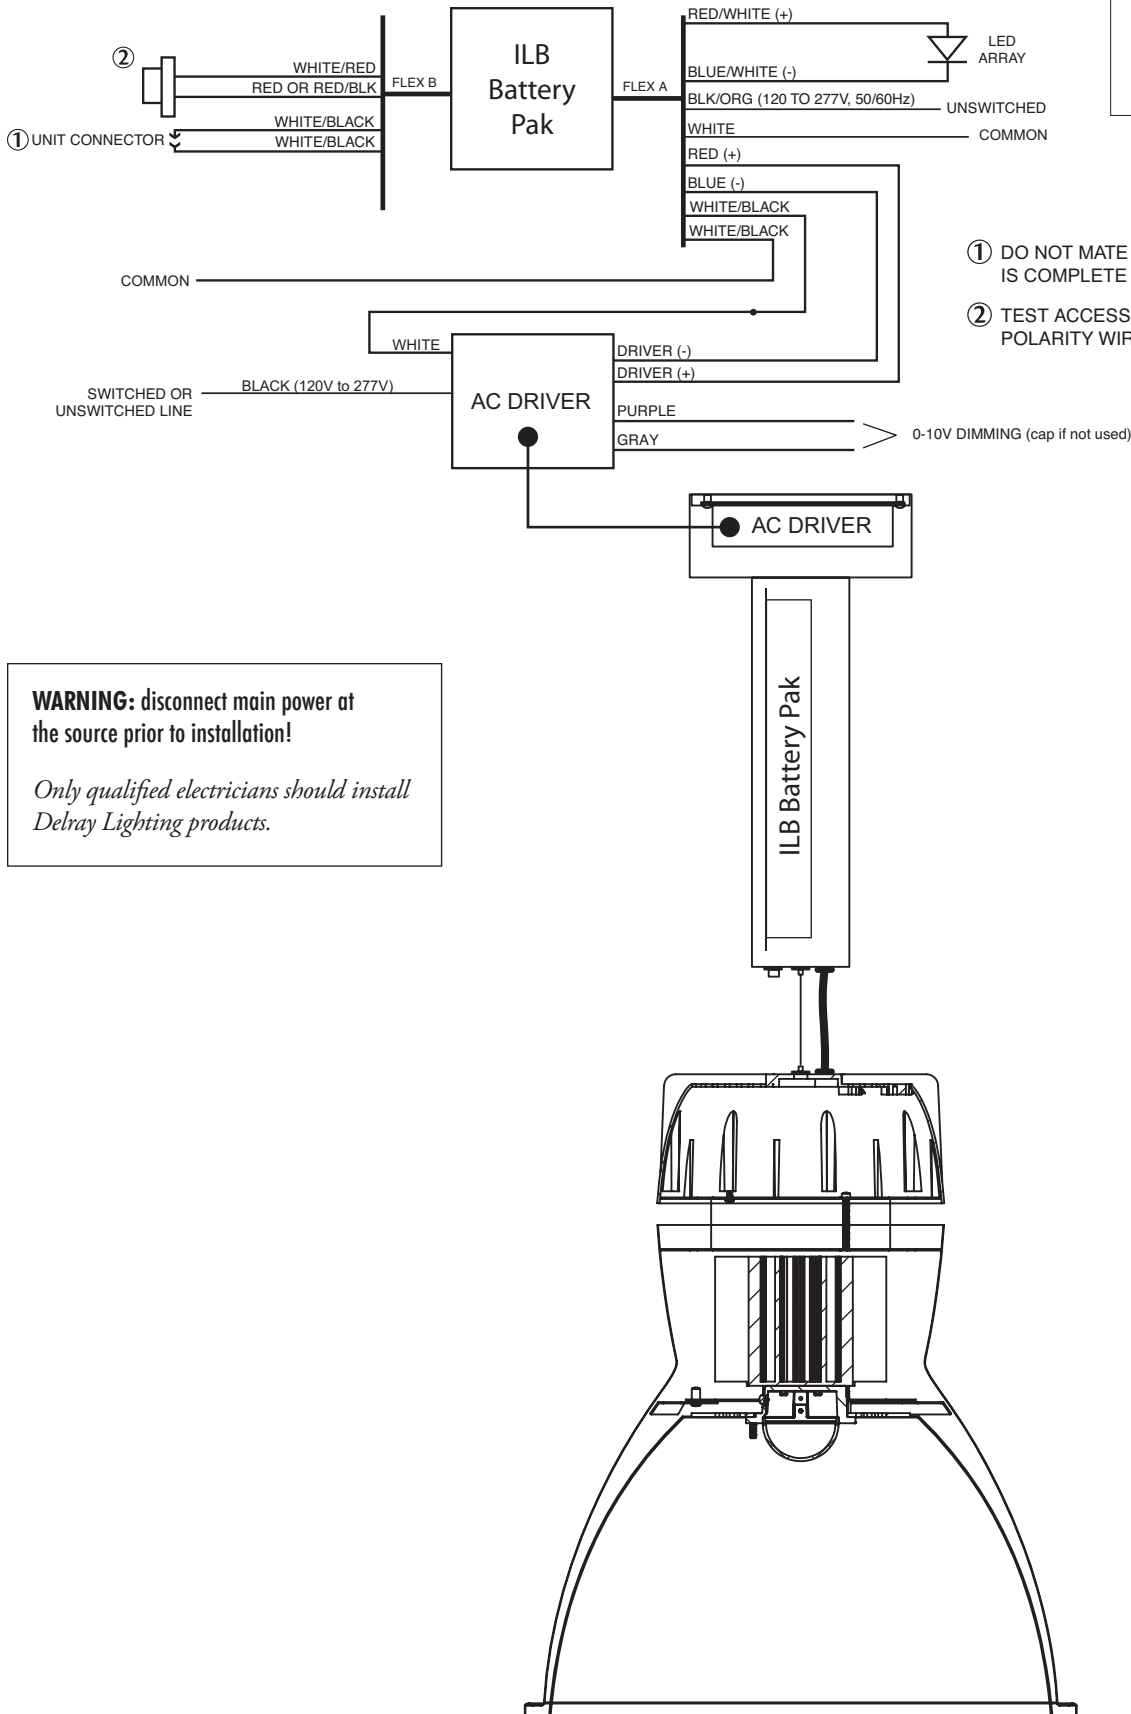

- ① DO NOT MATE CONNECTOR UNTIL INSTALLATION IS COMPLETE AND AC POWER IS SUPPLIED.
- ② TEST ACCESSORY LEADS-OBSERVE PROPER POLARITY WIRING.

WARNING: disconnect main power at the source prior to installation!

Only qualified electricians should install Delray Lighting products.