

# Metal Halide Remodel Downlight Installation Instructions

9/93



# TYPE:8

**DELRAY**  
LIGHTING  
INCORPORATED


For converting Mercury Vapor downlights

**WARNING:** Risk of fire or electric shock. Install this kit only in a fixture that has the construction features shown in these installation instruction drawings.


See back page for listing of U.L. Classification

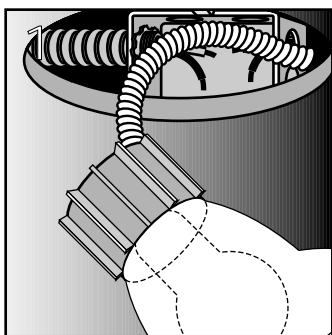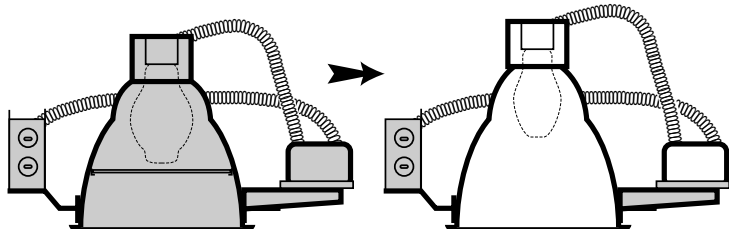


Remove existing reflector and socket cap from fixture

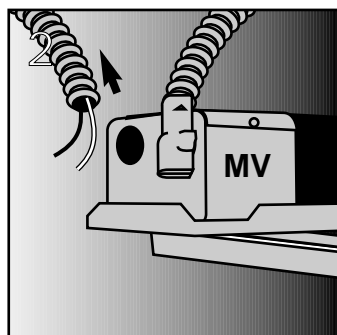


Disconnect power feed from ballast compartment and remove ballast

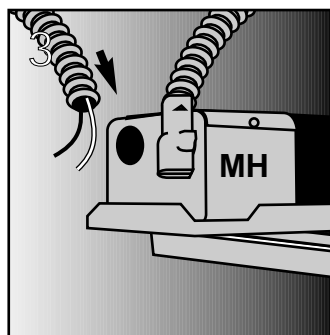

Attach power feed to new ballast assembly and remount ballast

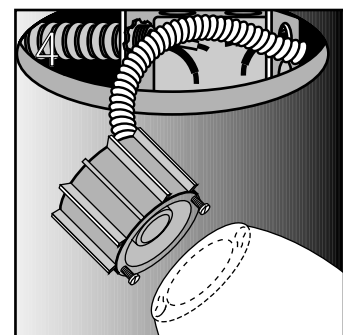

Attach new reflector to New Metal halide socket cap

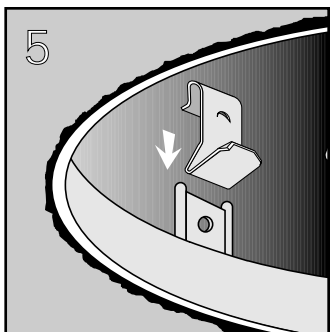


Snap on appropriate spring clips to mounting frame




Slide reflector into frame, insert proper lamp and check operation


**Note:**  
The existing fixture you are retro-fitting may require other clip options. If you have any problem with the MC2 clip, please study the following clip options to determine the best clip

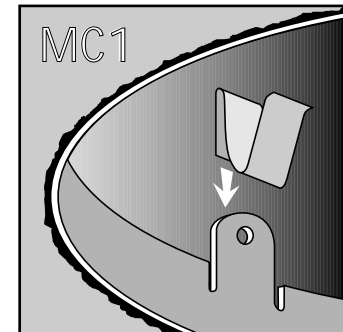


Clip snaps onto mounting frame screw holes

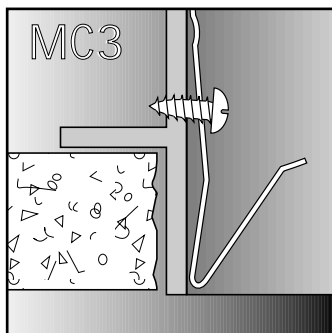


MC2 clip can be screwed into side of frame

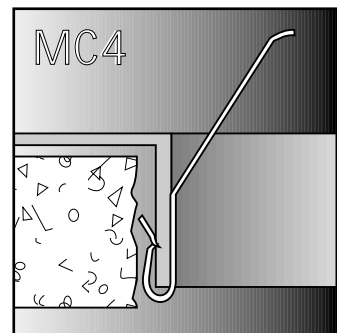

Clip mounts under steel mounting frame collar

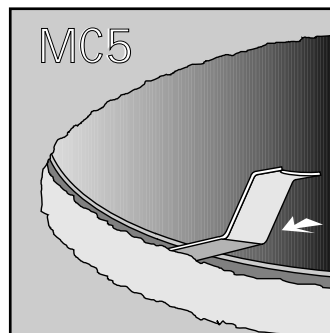

For frames with no collar, clip slides between frame and ceiling

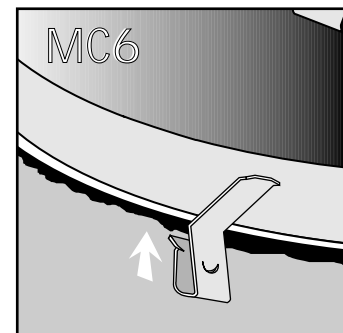

Clip mounts under cast aluminum mounting frame collar