


# ROCKET OPEN LED

## Emergency Battery Backup (EM) Wiring Installation ou de montage

For Models:

IL7712/13/14/16

IL7812/13/14/16

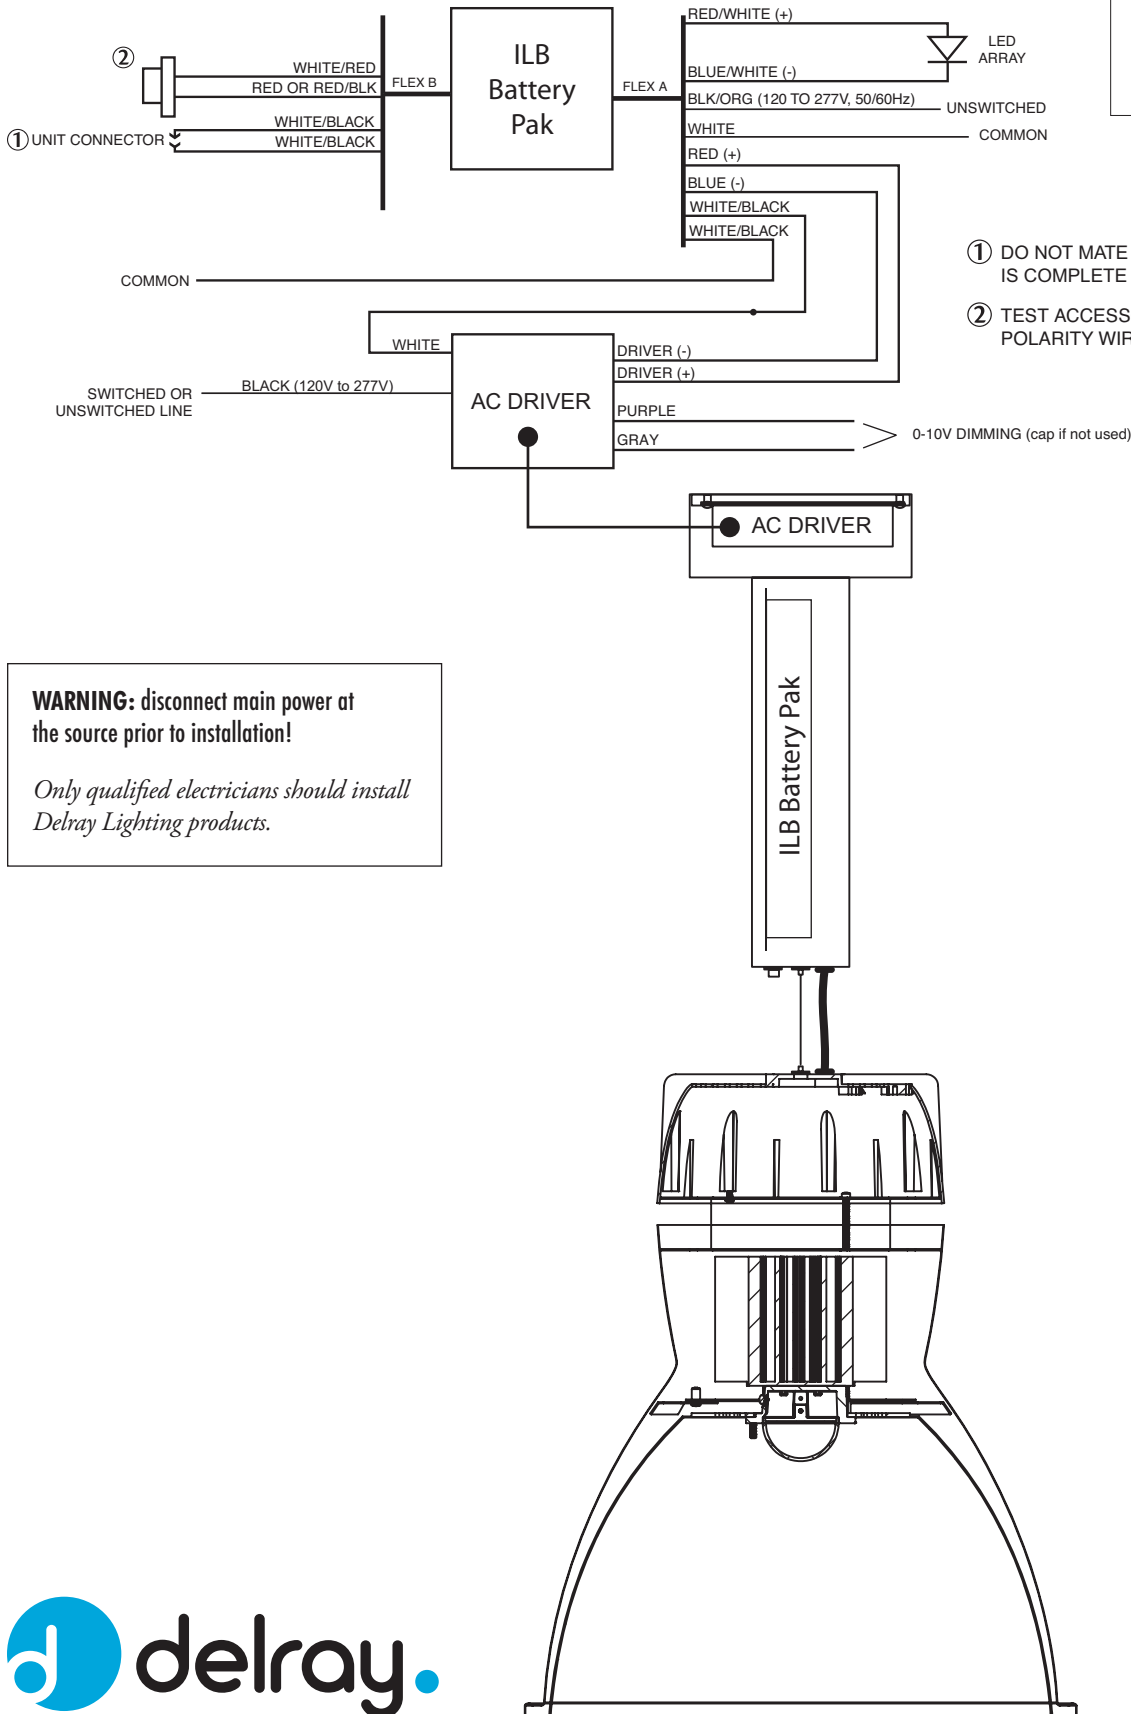

① DO NOT MATE CONNECTOR UNTIL INSTALLATION IS COMPLETE AND AC POWER IS SUPPLIED.

② TEST ACCESSORY LEADS-OBSERVE PROPER POLARITY WIRING.

**WARNING:** disconnect main power at the source prior to installation!

*Only qualified electricians should install Delray Lighting products.*

