



Max. Wiring Distance (at full load)



Wire Size (AWG)	Distance (ft.)	NOMINAL	X=ACTUAL	Y=HANG POINT (SQUARE)
18	18	2 ft.	23.50"	22.40"
16	29	3 ft.	34.88"	33.78"
14	46	4 ft.	46.25"	45.15"
12	71	5 ft.	57.63"	56.53"
10	120	6 ft.	69.00"	67.90"
		8 ft.	91.75"	90.65"

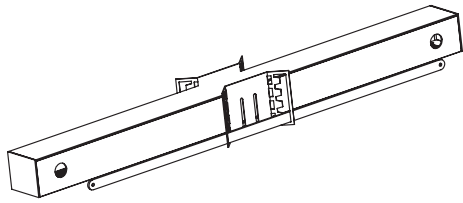

SIDE VIEW

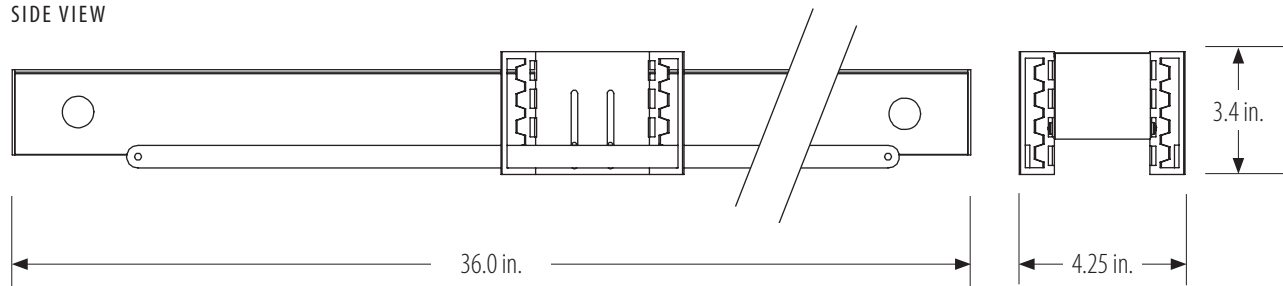

TOP VIEW

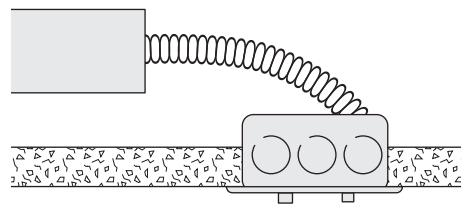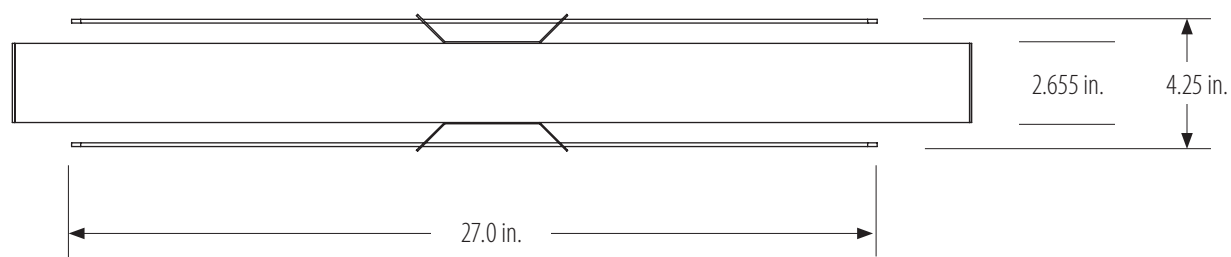

Test switch and charge indicator

NOTE: EM packs require 2x4 handy box mounted to ceiling for test switch and charge indicator light.

Maximum canopy to fixture distance: 25 ft.

Maximum canopy to driver distance: 100 ft.
(with 10 AWG wire).

Longer driver housing

Remote driver housing includes bar hangers for mount above suspended ceilings.

Bar hangers and brackets may be removed for direct mount to structure with screws.

Drivers must remain accessible after installation, and must be mounted no less than 4 inches apart.

LEDs will not operate unless polarity is correct